

OLIVANCE Olivance PowerLink Gateway OPLG-3000 Quick Installation Guide

Installation Guide for Olivance Gateway:

1. Activate SMA Inverter Modbus Interface:

Enable the SMA Inverter Modbus Interface, which is initially deactivated.

2. Power Connection:

Connect the Olivance Gateway to a 12V 1A DC power supply.

3. DRM Connection:

Connect the RJ45 DRM port on the Olivance device to the RJ45 DRM port on the Signal Generating Device (GSD).

4. Web Interface Configuration:

- Use your laptop or smart device to connect to the Olivance Wi-Fi Network with the following credentials:
 - SSID: Olivance-AP
 - o Password: 11223344
- Access the Settings Page:
 - Open your web browser and enter http://169.254.12.1 in the address bar.
- Connection Topology:
 - Choose the appropriate connection type:
 - A. Ethernet: Direct connection to the inverter or hub using an ethernet cable.
 - B. Wi-Fi Client: Connect to the inverter's Wi-Fi or the network router's Wi-Fi.
- Modify Settings (if necessary):
 - Upon accessing, you'll be directed to the settings page. Adjust configurations as needed.
- Update and Refresh:
 - Click on the "Update" button and patiently wait for the web page to refresh.
- Verify Entered Settings:
 - Double-check the accuracy of the entered settings to ensure proper configuration.
- Save and Restart:
 - Complete the process by clicking "Save & Restart" to apply changes and initiate a device reboot.

5. To reconfigure the settings

- Unscrew the device cover to access the reset button.
- Press and hold the reset button, the status LED will turn off.
- After 5 seconds the LED will blink 4 times.
- Release the button and wait for 30 seconds.
- The device will now restart in Wi-Fi AP mode and Olivance-AP Wi-Fi will appear. The SSID and password will reset to their default values.
- After connecting to Olivance-AP Wi-Fi repeat step 4.

Reference User Installation Manual:

For detailed instructions, refer to the user installation manual available on www.olivance.com

This concise guide outlines the essential steps for installing and configuring the Olivance Gateway for optimal performance.

